



## **Guide Rod**

1. Disassemble Guide Rod with supplied wrench.
2. Disassemble pistol upper half and substitute the new Guide Rod Head for your old one, and the new Guide Plug for your old one.
3. Reassemble the pistol as usual using the new guide rod head, Guide Plug, and your old spring.
4. Install the Guide Rod end last, and tighten snugly. Do not overtighten.