



Standard Magazine Release with Oversize Button

1. Unload gun and remove magazine.
2. Choose a screwdriver that fits the mag catch lock.
3. Press in on the button and gently turn the catch lock 1/4 turn counterclockwise so that it unlocks inside the mag catch.
4. Remove catch from gun.
5. Turn catch lock back clockwise 1/4 turn to remove it and its spring from the catch.
6. Install the spring and catch lock into the new part and lock back in place.
7. Reinstall in gun and check for proper function.
8. Install button and 4-40 screw.

CAUTION: Do not overtighten screw.